

Ball Joint Separator - Scissor Type

For separating ball joints this tool uses the scissor method. Always grease threaded bar before and after use.



Additional Information

- Scissor type. Jaw size: 30mm (width), 18mm (depth); maximum opening: 50mm.
- Removes ball pin housing on steering arms.
- Carbon Steel. Thrust nut for leverage.
- **IMPORTANT: ENSURE THE THREADED BAR IS WELL LUBRICATED WITH MOLYBDENUM DISULPHIDE GREASE BEFORE USE.**
- The tool should not need forcing. If it does, the ball joint will need gently tapping or heating to separate it.

<http://lasertools.co.uk/product/0282>

